




Change-over/Reversing solenoid
24 volt 100 amp intermittent
part 0-335-59

Connection diagram

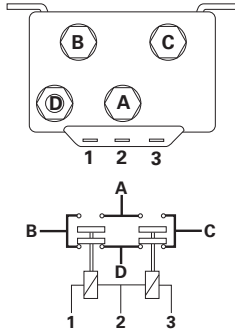

Coil Terminals Energised	Contacts Made
None	B - C - D
1 + 2	A - B and C - D
2 + 3	B - D and A - C
1 + 2 + 3	A - B - C

Wiring for use as motor reversing solenoid

For use as a motor reversing solenoid the following connections should be made:


- Contact A Through motor field to +ve
- Contact B/C Motor armature
- Contact D -ve supply

- Coil Terminal 1/3 Switched +ve supply
- Coil Terminal 2 -ve supply



Change-over/Reversing solenoid
24 volt 100 amp intermittent
part 0-335-59

Connection diagram

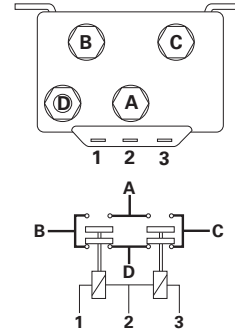

Coil Terminals Energised	Contacts Made
None	B - C - D
1 + 2	A - B and C - D
2 + 3	B - D and A - C
1 + 2 + 3	A - B - C

Wiring for use as motor reversing solenoid

For use as a motor reversing solenoid the following connections should be made:


- Contact A Through motor field to +ve
- Contact B/C Motor armature
- Contact D -ve supply

- Coil Terminal 1/3 Switched +ve supply
- Coil Terminal 2 -ve supply



Change-over/Reversing solenoid
24 volt 100 amp intermittent
part 0-335-59

Connection diagram

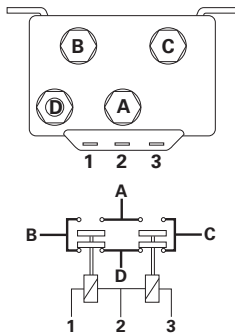

Coil Terminals Energised	Contacts Made
None	B - C - D
1 + 2	A - B and C - D
2 + 3	B - D and A - C
1 + 2 + 3	A - B - C

Wiring for use as motor reversing solenoid

For use as a motor reversing solenoid the following connections should be made:


- Contact A Through motor field to +ve
- Contact B/C Motor armature
- Contact D -ve supply

- Coil Terminal 1/3 Switched +ve supply
- Coil Terminal 2 -ve supply



Change-over/Reversing solenoid
24 volt 100 amp intermittent
part 0-335-59

Connection diagram

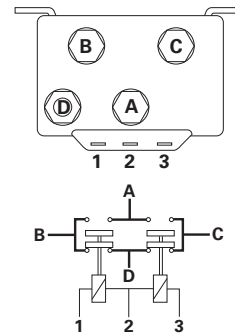

Coil Terminals Energised	Contacts Made
None	B - C - D
1 + 2	A - B and C - D
2 + 3	B - D and A - C
1 + 2 + 3	A - B - C

Wiring for use as motor reversing solenoid

For use as a motor reversing solenoid the following connections should be made:

- Contact A Through motor field to +ve
- Contact B/C Motor armature
- Contact D -ve supply

- Coil Terminal 1/3 Switched +ve supply
- Coil Terminal 2 -ve supply